

Nova 900/1000/1300/1500/1800/2400

220-240V AC 50Hz 1500W

## **Installation & Operation Manual**

#### **CONSUMER SAFETY INFORMATION**

- 1. Read this manual before installing and operating this appliance.
- 2. Failure to follow these instructions may result in electric shock, fire property or personal injury.
- 3. Do not store or use gasoline or other flammable liquids in vicinity of this appliance.

## **Important Safety Information**

### **Safety Definitions**

The following keywords are defined and can be used in this document. Keywords at the start of a WARNING indicate the type and seriousness of the ensuing risk if measures to prevent the risk are not taken.



#### CAUTION

Indicates a hazardous situation which, if not avoided, could result in property damage and minor or moderate injury.



#### WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



Indicates a hazard which, if not avoided, will result in electric shock, fire, serious injury, or death.



#### NOTICE


Indicates additional information that is not related to physical injury.



#### WARNING! SAFETY INFORMATION

- Read all instructions before using this heater!
- This heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater, and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children, persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, or when the heater is left operating and unattended.
- DO NOT operate any heater with a damaged cord or plug or after the heater malfunctions / has been dropped or damaged in any manner. Discard the heater or return to the authorised service facility for examination and /or repair.
- DO NOT run power cord under carpeting. DO NOT cover power cord with throws, rugs, runners or similar coverings. DO NOT route power cord under furniture or appliances. Arrange power cord away from traffic area where it will not be tripped over.
- · Connect to properly grounded outlets ONLY.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause electric shock or fire or damage the heater.
- · To prevent a possible fire DO NOT block air intakes or the exhaust in any manner. Doing so could cause a fire. DO NOT use on soft surfaces like a bed where openings may become blocked

- · A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint or flammable liquids are used or stored.
- · Use this heater only as described in this manual. Any other use NOT recommended by the manufacturer may cause fire, electric shock or injury to persons.
- · ALWAYS plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- DO NOT place the heater near a bed as objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- NEVER use this heater in bathrooms, laundry rooms or any other location where the heater could fall into a bathtub or pool, become damp or come in contact with water.
- . AVOID FIRE! Regularly inspect all air vents to make sure they are free from dust, lint, or other blockage. Unplug the unit and clean with a vacuum ONLY. DO NOT rinse or get wet.
- · ALWAYS hung to wall bracket before use. DO NOT set on the floor or other surface to use.
- **NEVER** use a wall hung bracket from another manufacturer.
- This product is **not intended to be a primary heat source**. It is for supplemental heat only.
- INDOOR use only! NEVER use this heater outdoors! Doing so may result in electric shock!
- Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!
- **ALWAYS** turn this heater off before unplugging it from the outlet.
- **ALWAYS** disconnect this unit from the power supply before performing any assembly or cleaning, or before relocating the electric fireplace.
- **NEVER** leave this heater unattended. **ALWAYS** unplug this heater when not in use.
- ALWAYS store this heater in a dry location. NEVER use the fireplace if it has become wet.
- **NEVER** plug this heater into an outlet that is **old, cracked or has any loose wires or connections.** Plugging this heater into a faulty outlet could result in electric arcing within the outlet that could cause the outlet to overheat or catch fire.
- ALWAYS check your heater cord and plug connections with each use!
- MAKE SURE the plug fits tightly in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
- · Heaters draw more current than small appliances. Overheating may occur even if this has not occurred with the use of other appliances.
- During use check frequently to see if the plug outlet or face plate is HOT!
- If the outlet or face plate is HOT discontinue use immediately and have a qualified electrician inspect and/or replace the faulty outlets.
- The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter MUST be used. The adapter MUST be properly grounded to the outlet box (see figure at right) (Note: Adapter NOT INCLUDED)
- SAVE THESE INSTRUCTIONS!

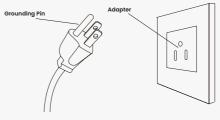

## **Installation Instructions**

### **Preparation**




#### CAUTION

This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

### **Unpacking Inspection**

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grounded for wall-hanging or recessing use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.

#### Parts & Hardware

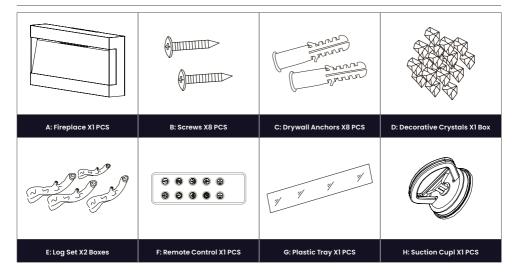


### **Tool preparation**

You will need the following tools (not included):

- Phillips screwdriver
- Stud finder
- Level
- Tape measure
- Electric drill
- 1/4" wood drill bit
- Hammer.

# **Specification & Dimension**

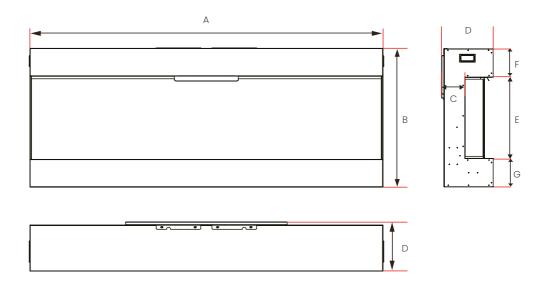


### **Product Dimensions**

MODEL	Α	В	С	D	E	F	G
Nova 900	36.0″	19.7"	2.95"	6.95"	11.8"	3.94"	3.94"
	915mm	500mm	70mm	176.4mm	300mm	100mm	100mm
Nova 1000	42.0"	19.7"	2.95"	6.95″	11.8"	3.94"	3.94"
	1067mm	500mm	70mm	176.4mm	300mm	100mm	100mm
Nova 1300	50.0"	19.7"	2.95"	6.95″	11.8"	3.94"	3.94"
	1270mm	500mm	70mm	176.4mm	300mm	100mm	100mm
Nova 1500	60.0″	19.7"	2.95"	6.95″	11.8"	3.94"	3.94"
	1524mm	500mm	70mm	176.4mm	300mm	100mm	100mm
Nova 1800	72.0"	19.7"	2.95"	6.95″	11.8"	3.94"	3.94"
	1829mm	500mm	70mm	176.4mm	300mm	100mm	100mm
Nova 2400	95.0"	19.7"	2.95"	6.95"	11.8"	3.94"	3.94"
	2413mm	500mm	70mm	176.4mm	300mm	100mm	100mm

## **Recessed To Wall Installation**

## Step A

Using the table below, build the apperture for the fire to sit in. Figure (A)

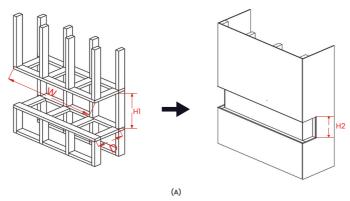


## Framing Hole Size

MODEL	w	D	н	H2
Nova 900	36.2" (919mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)
Nova 1000	42.2" (1071mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)
Nova 1300	50.2" (1274mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)
Nova 1500	60.2" (1528mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)
Nova 1800	72.2" (1833mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)
Nova 2400	95.2" (2417mm)	>11.8" (300mm)	19.8" (504mm)	11.8" (300mm)


## Step B

Using the screw driver to take off the screws that secure the top of the glass from the front. Figure (B)

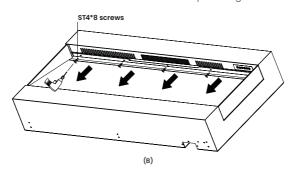


## Step C

Remove the sheet metal strip first then have two adults use the suction cup to pull off the glass panel and take it out. Figure (C,D)

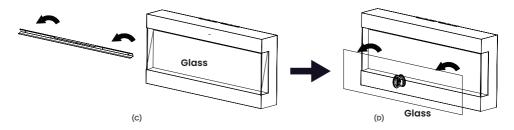


## Step D

Place the white plastic tray in the bottom of the fire. Then place thee crystal and log sets. Figure (E,F)

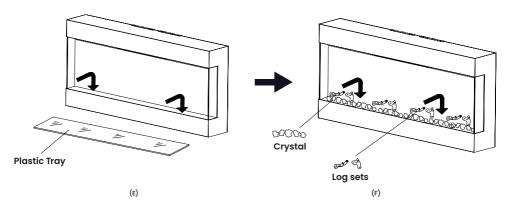

## Step E

Have two adults use the suction cup to put the glass back into the fireplace. Then reinstall the metal strip to secure the glass. Figure (G)

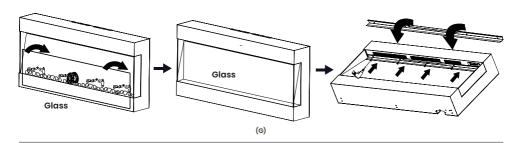

## Installation

The three-sided fireplaces are designed to be built-in and allow for the finishing material (drywall, stone, tile, etc.) to be built right down to the glass edge.


#### NOTE

Due to the many different materials used on different walls it is highly recommended that you consult your local builder before you install this appliance.

Make an opening for the fireplace according to the requested measurement.



Before inserting the fireplace into the wall opening plug in and check that the fireplace works normally.

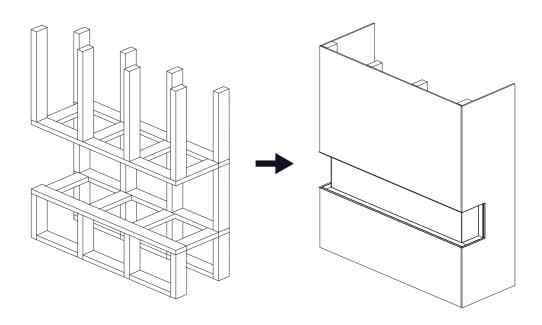

## **Wall Hung Installation**



#### WARNING


Installation must be performed only by a qualified individual



Due to the many different materials used on different walls it is highly recommended that you consult your local builder before you install this appliance on the wall.


## Step 1

Use a screwdriver to remove all the four PCS ST4\*8 silver screws on the top of the device. Then you can take off the back wall bracket. Figure (A)

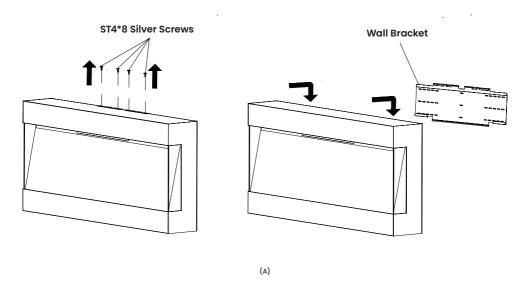


## Step 2

Use an electric drill to drill 8 screw holes in the wall. The position of the screw holes needs to correspond to the holes on the wall bracket. **Figure (B)** 

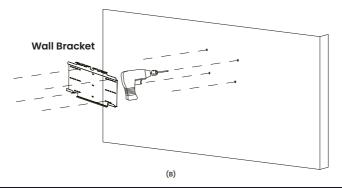


## Step 3

Use a hammer to put the screws and anchors into the wall together with the wall bracket. Figure (C,D)

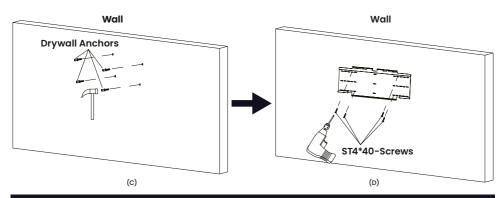

## Step 4

Have two adults lift the device and put it onto the bracket. Then lock the Pre-4-PCS silver screws on the top. **Figure (E,F)** 

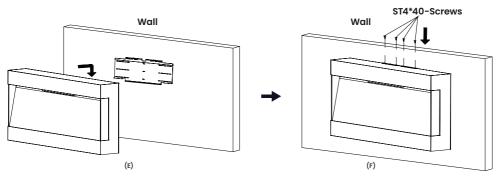

## **Instructions For Use**



#### WARNING

Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in electric shock, fire, serious injury, or death.


#### Power

Plug the power cord into a AC 220-240 Volt outlet see IMPORTANT SAFETY INFORMATION on Pages 2 and 3. Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. DO NOT plug other appliances into the same circuit.

#### **Methods of Operation**

This electric fireplace can be operated by the CONTROL PANEL/TOUCH PANEL or by the battery powered REMOTE CONTROL. The operation and functions of the two methods are the same. Before operating, please review the IMPORTANT SAFETY INFORMATION on Pages 2 and 3, and heed all WARNINGS.

### **Start Up Instructions**

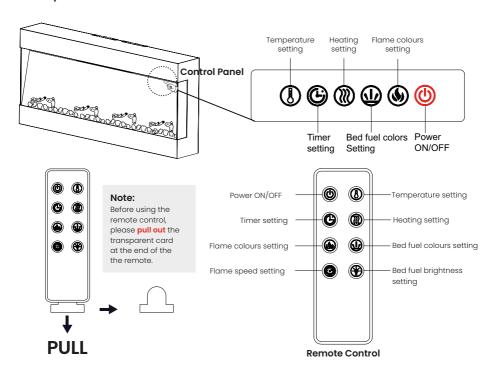

# **Remote Control Description**

ICONS	FUNCTIONS	ACTION & INDICATION			
	Power	SWITCH ON/OFF BUTTON: SWITCH ON: Press the POWER button on the keyboard or on the remote control with a short buzzer sound the electric fireplace starts to work.  SWITCH OFF: Press the POWER button on the keyboard or the remote control again with a short buzzer sound the LED light will be off/the electric fireplace will be off/the heating will be off.  NOTE: The power supply is 110V-240V			
	Flame Colour	FLAME COLOUR SETTING: The initial flame colour is orange. Press the button on the remote control. Each time you press, the flame colour will change to: F01 to F13: F01 Orange; F02 Red; F03 Blue;etc; F12 cyan-blue; F13 grey. F14: Automatically cycle colors from F01 to F13. F15: Turn off flame light.			
	Bed Fuel Colour	BED FUEL COLOUR SETTING:  The initial bed fuel colour is orange. Press the button on the remote control. Each time you press,the flame colour will change to: C01 to C13: C01 Orange; C02 Red; C03 Blue etc. C12 cyan-blue; C13 grey C14: Automatically cycle colours from C01 to C13.			
	Heating	HEATING SETTING:  Press the button to initiate the heater. L0: Heater blows warm air (750W) H1: Heater blows warmer air (1500W)  OFF: Turn off the heater, no heating and blowing.  NOTE: The heater only works when the flame light is on. If the flame light is off, the heater will not turn on.			
<b>(B)</b>	Temperature	TEMPERATURE SETTING: PRESS ONCE: Touch panel indicator becomes active. PRESS AGAIN until desired setting is reached. Digital display shows setting circles as below:    Display Value			

ICONS	FUNCTIONS	ACTION & INDICATION
	Timer	TIMER SETTING:  9 Settings: (1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h, 9h)  Controls timer settings to turn off the fireplace at a selected time, ranging from 1 hour to 9 hours.  NOTE: The default timer is 0 hours.



Flame Speed

### FLAME SPEED SETTING:

5 levels setting: (S5--S4--S3--S2--S1)

The flame speed is on the fastest mode by default: S5 If you need to adjust the flame speed, press the remote button, the speed of the flame will become slow down from S5 to S1.

NOTE: This function can only be controlled by the remote control.



## **Function Description**



#### NOTICE

When the heater is first turned on, a slight odour may be odour may be present. This is normal and should not occur again unless the heater is not used for a long period of time.



#### NOTICE

To improve operation aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly. Give the unit time to respond to each command.

### **Temperature Limiting Control**

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

- 1. Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
- 2. Unplug the power cord from the outlet.
- 3. Inspect the fireplace to make sure no vents are blocked or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
- 4. With the POWER switch in the OFF position plug the power cord back into the outlet.
- 5. If the problem continues have your outlet and wiring inspected by a professional.

### **CAUTION: Sharp Edges!**

- 1. After installation, the power plug should be accessible.
- 2. If the power cord is damaged it must be replaced by the manufacturer its service agent or a similarly qualified person to avoid a hazard.
- 3. The heater must not be located immediately below a socket.
- 4. The appliance is not intended for use by young children or by persons with reduced physical, sensory, or mental capabilities. Young children should be supervised to ensure they DO NOT play with the appliance.
- 5. DO NOT use this heater in the immediate surroundings of a bath, a shower or swimming pool.
- 6. To avoid overheating DO NOT cover the heater

## **Care & Maintenance**

### Cleaning



**ALWAYS** turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.



**NEVER** immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

#### Metal

- · Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- DO NOT use brass polish or household cleaners as these products will damage the metal trim.

#### Glass

- · Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.
- NEVER use abrasive cleansers, liquid sprays or any cleaner that could scratch the surface.

#### Vents

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- · Clean the exterior of the fireplace with a slightly damp cloth or duster.

#### Maintenance



Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!



**ALWAYS** turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

#### **Electrical and Moving Parts**

- The fan motors are lubricated at the factory and will not require lubrication.
- · Electrical components are integrated in the fireplace and are not serviceable by the consumer.

#### Storage

· Store heater in a clean dry place when not in use.



#### WARNING

No other servicing should be performed by the consumer. Do not attempt to service the unit yourself.

# **Troubleshooting**

### **M** WARNING



#### WARNING

Disconnect the appliance completely and let cool prior to any service. Only a qualified service person should service and repair this electric appliance.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fireplace turns off and will not turn on	Fireplace has overheated and safety device has caused thermal switch to disconnect or home circuit breaker has opened.	Pull the plug and wait 5 minutes to plug it back in and turn it on.
Flame is not moving	<ol> <li>Loose wiring.</li> <li>Flame motor defective.</li> <li>Flame rod out of place.</li> </ol>	<ol> <li>Inspect wiring for loose connections.</li> <li>Call a qualified service technician to replace flame motor.</li> <li>'Flame Rod' out of place due to rough transit/handling of the product. This issue can be corrected simply by removing the glass, flipping the fireplace upside down removing a set of screws that are holding the bottom frame plate and placing the flame rod back into place.</li> </ol>
Flame is not visible	Wiring is loose.	Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.     Push the flame button to high.
Log set and / or is not glowing	<ol> <li>Wiring is loose.</li> <li>Ember is off mode.</li> </ol>	Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.
Remote control does not work	Low batteries.     Not aiming correctly.     Defective remote control and/or sensor.	<ol> <li>Replace batteries in remote control.</li> <li>Aim control at sensor located directly behind glass screen in centre of unit just above logs.</li> <li>Replace remote control and/or sensor.</li> </ol>

### **M** WARNING



#### WARNING

Disconnect the appliance completely and let cool prior to any service. Only a qualified service person should service and repair this electric appliance.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fireplace will not come on when switch is flipped to on	<ol> <li>The fireplace is not plugged into an electrical outlet.</li> <li>Control failure.</li> <li>Breaker tripped.</li> </ol>	<ol> <li>Check plug.</li> <li>Call a qualified service technician.</li> <li>Reset breaker.</li> </ol>
Heater does not provide heat when turned on	<ol> <li>Thermal switch has been tripped.</li> <li>Wiring is loose.</li> <li>Heater is defective.</li> </ol>	1. Turn unit off and unplug unit for 10 minutes. Plug back in and turn unit on. If plug cannot be reached, follow directions for tripped circuit breaker.  2. Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.  3. Replace begter.

Replace heater.



#### CAUTION

Please make sure the unit is always disconnected before performing any work. Always place the glass and the unit on a towel or other protective material to avoid damaging the parts or frame.

This entire process should not take longer than 20-30 minutes.

### LIMITED WARRANTY

This warrants to the original purchaser that this product is free from defects in material and workmanship as of the date of purchase and that it will, under normal use and proper care, remain so for one year from the date of purchase. Missing or initially defective parts will be replaced free of charge during the period of this limited warranty. If parts are unavailable, a comparable replacement or refund will be given. The original dated sales receipt is required for all warranty claims. This warranty does not cover damage that has occurred during transport from the point of purchase to the consumer's home. This warranty does not cover glass, light bulbs, batteries, transportation, labour, or other issues not associated with the manufacture of the product.

THIS PRODUCT IS FOR RESIDENTIAL USE ONLY. ANY COMMERCIAL USE OF THIS PRODUCT VOIDS ALL WARRANTIES AND FREES THE MANUFACTURER FROM ALL LIABILITY.

Read and understand all assembly and operating instructions, all safety information, and warnings before use. The following will void this warranty: damage caused by tampering with, modifying, or altering the fireplace insert in any manner; damage due to incorrect assembly, improper care, misuse, or abuse; damage from being used with the wrong power source; water damage; damage caused by this insert being used outdoors; damage caused by this insert being used for excessive periods of time; damage caused by the insert being used in a commercial application; damage from use as a primary heat source; other misuse or abuse not specifically listed herein.

THIS PRODUCT IS NOT INTENDED TO BE USED AS A PRIMARY HEAT SOURCE. IT IS FOR SUPPLEMENTAL HEATING PURPOSES ONLY.

## **Notes**



### www.omni-burn.co.uk

Electric Fires UK Group Limited, Greenhough Road, Lichfield, Staffordshire, WS13 7AU **Tel:** +44 1543 417052 | **Email:** info@omni-burn.co.uk

#### These products are only suitable for well insulated spaces or occasional use.

Manufactured in China. All products are protected by patents, registered design and intellectual property rights. Electric Fires UK Group Limited will protect these rights. All specifications are correct at the time of publishing but are subject to change.

